

LOC/DME I-ADJ	APP CRS	Rwy Idg	7000
109.35	120°	TDZE	1225
Chan 30(Y)		Apt Elev	1249

ILS Y RWY 12


PANGBORN MEML (EAT)

DME required.

MALSR

MISSED APPROACH: Climb to 2700 then climb to 4000 direct EAT VOR/DME and on EAT VOR/DME R-117 to QUINT INT/EAT 16.6 DME and hold.

ASOS 119.925	SEATTLE CENTER 126.1	UNICOM 123.0 (CTAF) 0
------------------------	--------------------------------	---------------------------------

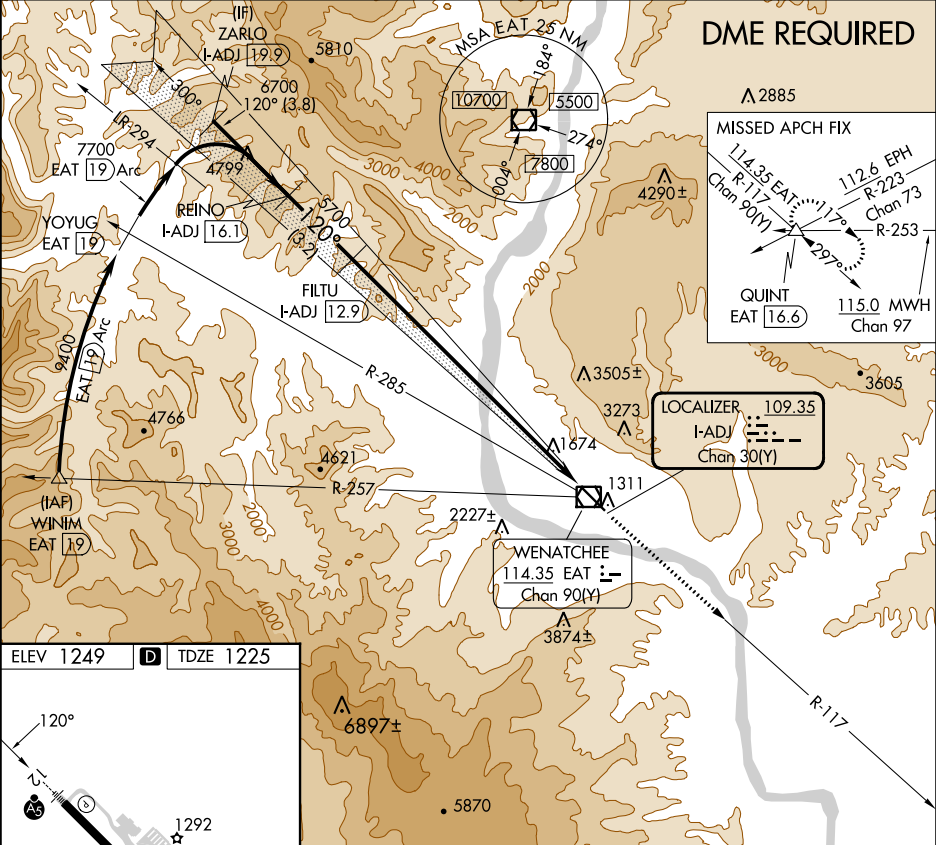

ELEV 1249

D

TDZE 1225

REIL Rwy 30 0

HIRL Rwy 12-30 0

ZARLO I-ADJ 19.9		REINO I-ADJ 16.1		FILTU I-ADJ 12.9		2700 ↑	4000 ↑	EAT □	EAT R-117	QUINT △
7700		6700		5700		Use I-ADJ DME when on the localizer course.				
GS 3.60° TCH 58		3.8 NM		3.2 NM		11.6 NM				
CATEGORY	A		B		C		D			
S-ILS 12	2433-4		1208 (1200-4)				NA			