


ILS or LOC RWY 30
OWATONNA DEGNER RGNL (OWA)

MISSED APPROACH: Climb to 2000 then climbing right turn to 3000 direct FOW VOR/DME and hold, continue climb-in-hold to 3000.


T
A NA



UNICOM

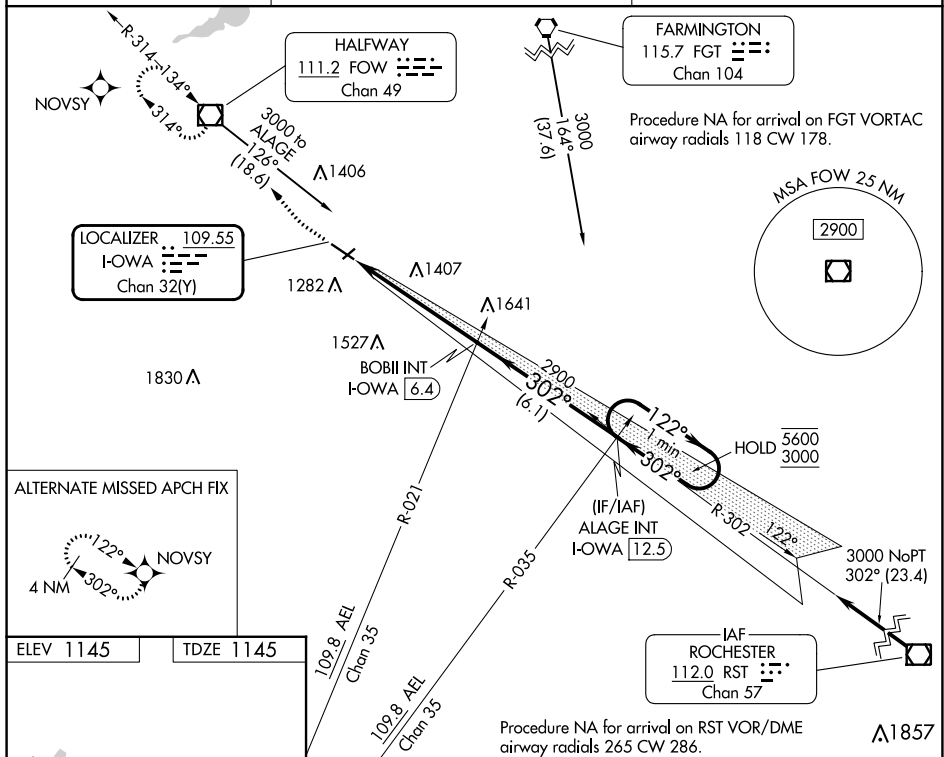122.7 (CTAF) **L**

Procedure NA for arrival on RST VOR/DME
airway radials 265 CW 286.

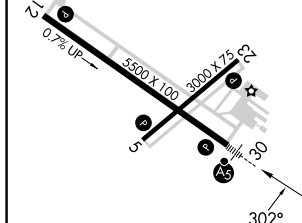

MIRL Rwy 5-23 **L**
REIL Rwys 5, 12, and 23 **L**
HIRL Rwy 12-30 **L**

FAF to MAP 5.4 NM

Knots	60	90	120	150	180
Min:Sec	5:24	3:36	2:42	2:10	1:48

OWATONNA DEGNER RGNI (OWA)

ILS or LOC RWY 30